


SF0420 Fitting Instructions

Ford Escort, Cortina, Capri

Anti Roll Bar to Track Control Arm Kit

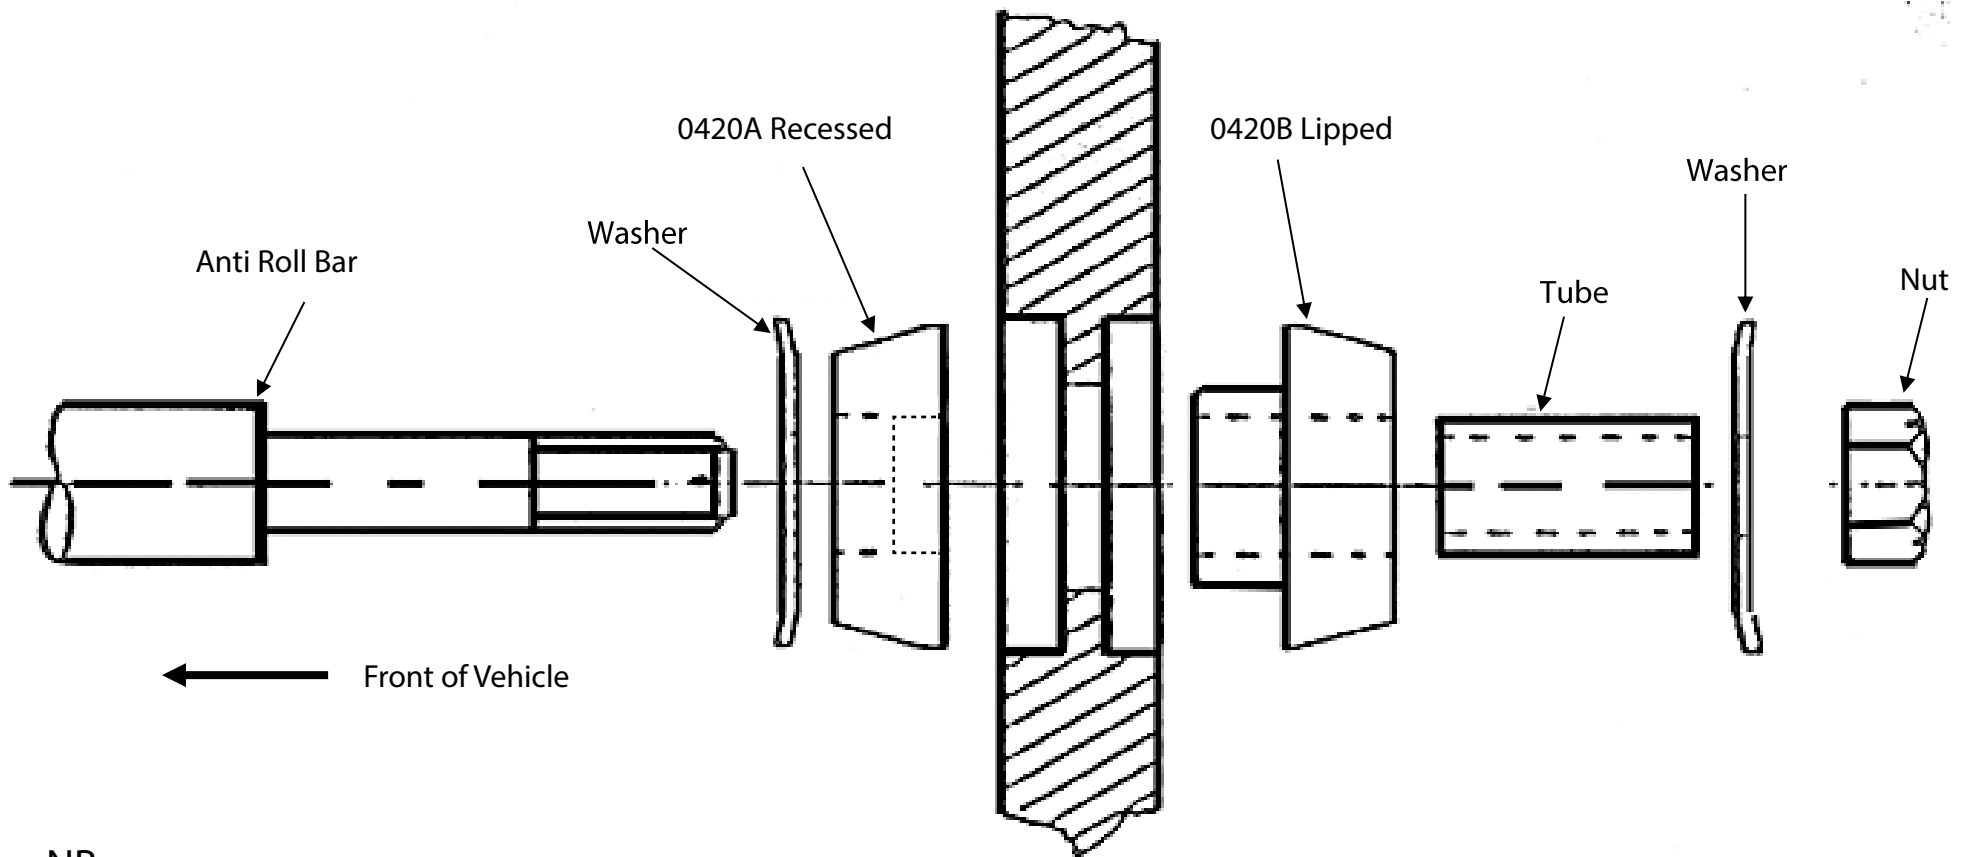

NB
ENSURE OLD TUBE IS REMOVED FROM
THE BAR BEFORE FITTING

Track Control Arm